












WARNING: DO NOT

-  Do Not forget to position leg latches on cross-axle. Leg latches must be in DOWN position and IN THE HOLE at rear of leg. These leg latches prevent the legs from being withdrawn when moving lift. (On Knock-Down Lifts only)
-  Never use lift on anything other than a firm level surface.
-  Do Not use the jack handle to move the lift when handle is in pump socket. Doing so will break the pump plunger.
-  Never push the boom up by hand.

WARNING: DO

-  Read all maintenance and service instructions before attempting work.
-  Always use the jack to raise the boom.
-  Always use the moving handle to move the lift.
-  This lift is to be used on a firm level surface only.
-  Make sure that the boom is fully lowered before adding oil to unit reservoir.
-  Use EXTREME CARE when carrying load or unloading jack so release valve is not damaged.

17 Instructions for Assembly of BlueBird Knock-Down Lift

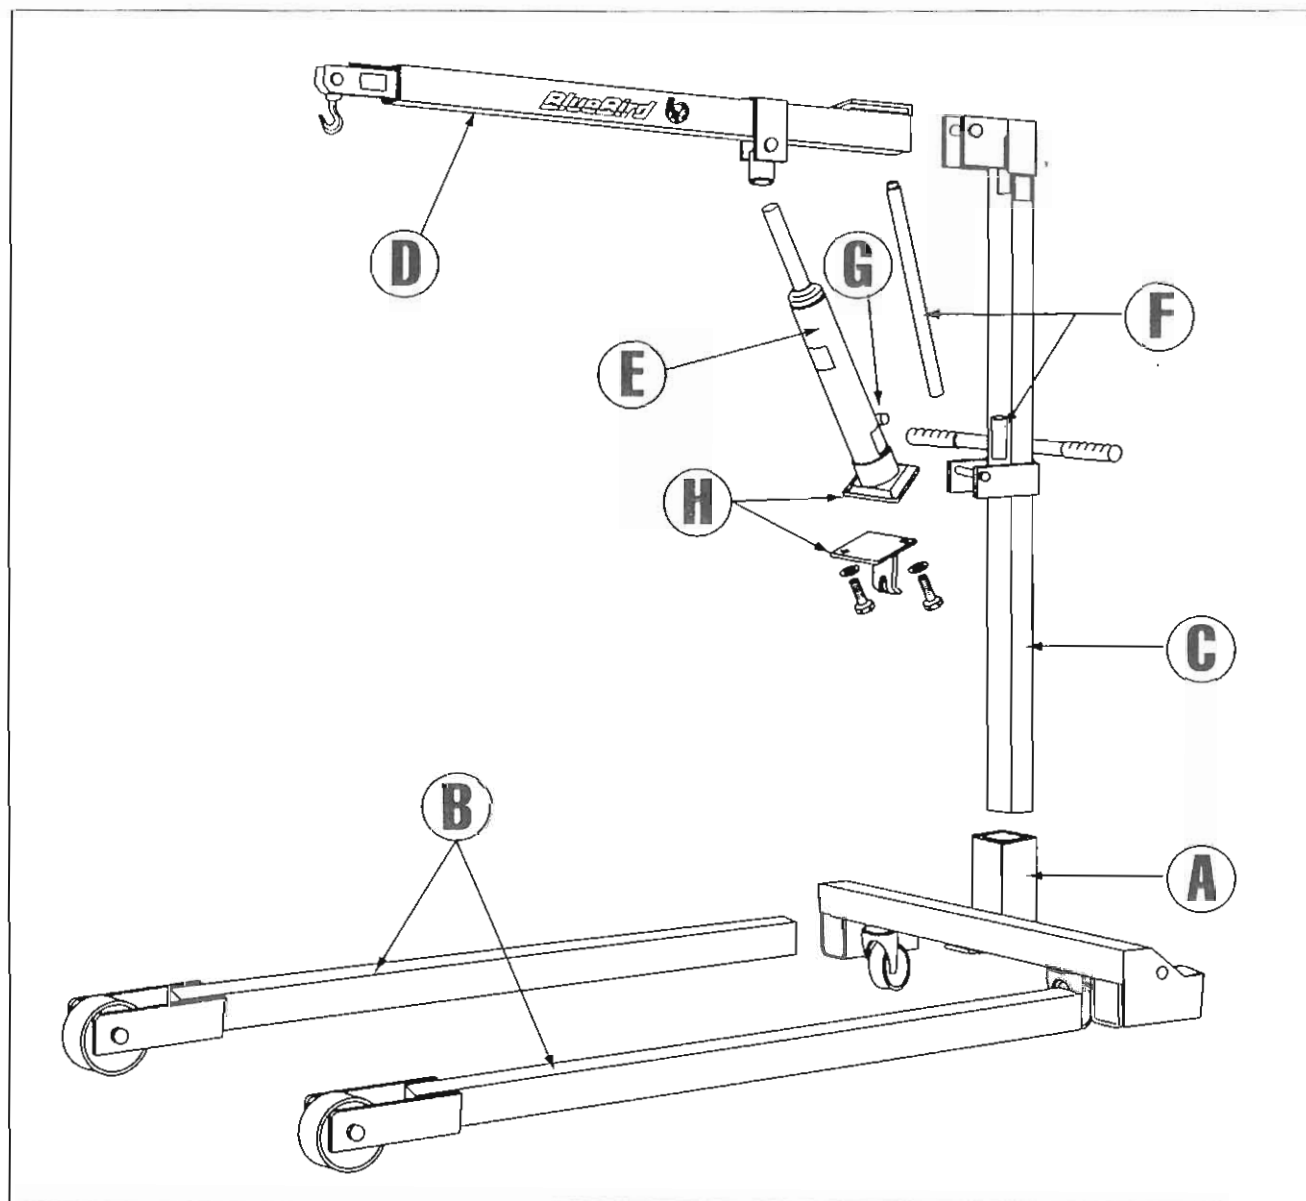

- Place cross-axle (A) on level surface
- Insert legs (B) completely, so that latches snap into holes in the legs. This is important as the latches keep the legs from pulling out when the lift is moved.
- Insert upright column post (C) into socket in cross-axle with flanges facing forward.
- Insert jack handle (F) into handle retainer.
- Hold front end of boom (D) at a high angle and slide boom hook into the pin on the column post from bottom side. Lower boom to relaxed position.
- Bolt base plate to bottom of jack (H).
- Place jack (E) on the pin on column post so that the pump of the jack (G) next to the column post.
- Place ram of jack into socket on boom.
- Use on level firm surface only.

Note: Red pins on cross-axle must be in DOWN position and IN THE HOLE at rear of legs. These pins prevent legs from being withdrawn when moving lift.