


# DIRECTIONS

## For care and operation of Superior Tile Cutter

(MODELS "A")

Automatic Spring Tension  
No adjustment  
screws needed

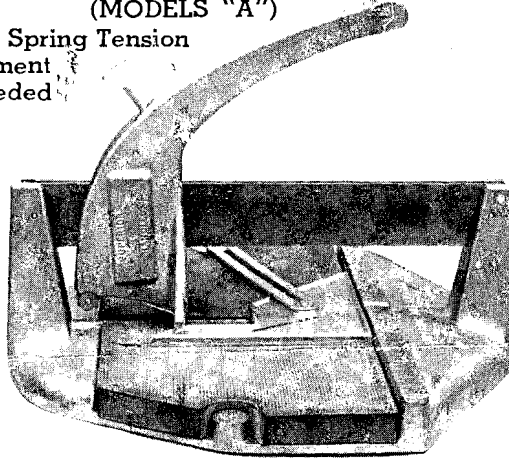

The construction of the Superior Tile Cutter makes it an easy tool to operate and care for. The use of light oil on turret glass cutter and carrying bar is necessary to insure long life of wheels and easy operation of handle.

The handle has a spring placed between insert and handle wall which keeps handle riding snug to bar without any adjustment necessary other than changing insert when worn.

To score and break tile: Set angle gauge to size of cut desired. Insert tile and hold with left hand. Set glass cutting wheel on extreme edge of tile; lift up on handle until slight pressure is on tile. Pull slowly but firmly across tile, thus scoring same. Place breaking wings on extreme edge of tile, or on edge next to ruled gauge. Press down on handle, thus breaking tile.

The thumb screw in handle stops handle after tile is broken, adjust by turning up or down when tile thickness varies.

In order to cut diagonal cuts, turn gauge around; score as before, but place breaker wings full on tile.